

## Wheel Alignment Specifications

Suspension	Camber	Camber Cross Tolerance	Caster	Caster Cross Tolerance	Total Toe	Steering Wheel Angle	Thrust Angle
Front							
FE1/FE2/FE3	-0.45° ± 0.60°	0.00° ± 0.60°	7.90° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
FE4	-1.00° ± 0.60°	0.00° ± 0.60°	8.00° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
Rear							
FE1/FE2/FE3	-0.45° ± 0.50°	0.00° ± 0.50°	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°
FE4	-1.00° ± 0.50°	0.00° ± 0.50°	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°

## Wheel Alignment Specifications

Suspension	Camber	Camber Cross Tolerance	Caster	Caster Cross Tolerance	Total Toe	Steering Wheel Angle	Thrust Angle
Front							
FE1/FE2/FE3	-0.45° ± 0.60°	0.00° ± 0.60°	7.90° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
FE4	-1.00° ± 0.60°	0.00° ± 0.60°	8.00° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
Rear							
FE1/FE2/FE3	-0.45° ± 0.50°	0.00° ± 0.50°	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°
FE4	-1.00° ± 0.50°	0.00° ± 0.50°	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°